


CLAIRE

Computerized **Local Air Index RE**porting
for Windows 95/98/NT®/2000/XP



The CLAIRE system provides current air index data via human-voice telephone messages - **without** any manual calculations or daily re-recordings of each message.

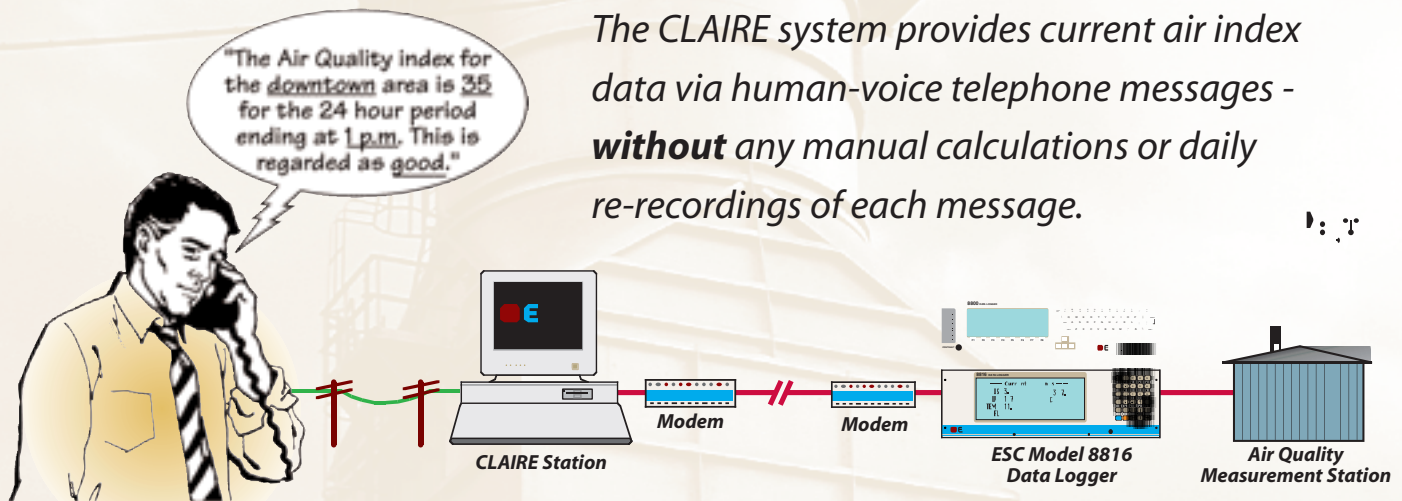

CLAIRE provides hourly air quality index data to anyone with a telephone -- *without* manual calculations and daily re-recording of messages.

Callers hear messages clearly spoken in a human voice created from pre-recorded message components, not electronically synthesized audio. Users with touch-tone telephones can choose the air quality index for selected geographic regions.

Manually-entered particulate matter data, pollen counts, pollen types, concentrations, and air quality predictions can also be reported. Caller statistics are logged, including Caller-ID where available.

CLAIRE can be run either as a stand-alone application, communicating with ESC data loggers directly, or net-

worked to a PC running Agilaire's E-DAS Ambient for Windows® software product.

CLAIRE includes a one-year return-to-factory warranty with call-in telephone support to ESC. Support for up to eight incoming phone lines and other custom features can be provided upon request.

MINIMUM SYSTEM REQUIREMENTS

Pentium Processor (166 MHz or faster)

32 MB RAM / 1.0 GB Hard Drive

Microsoft Windows 95/98 or NT

14" Color SVGA Monitor

Keyboard / Mouse / Diskette Drive

Amplified Microphone / Amplified Speakers

Voice Card with support for two telephone lines



Fairview Technology Center
11020 Solway School Road, Suite 104
Knoxville, TN 37931

865 228-2263 phone/fax
info@agilairecorp.com email
www.agilairecorp.com web